
Level indicators

MAGTOP 801, 803, 806

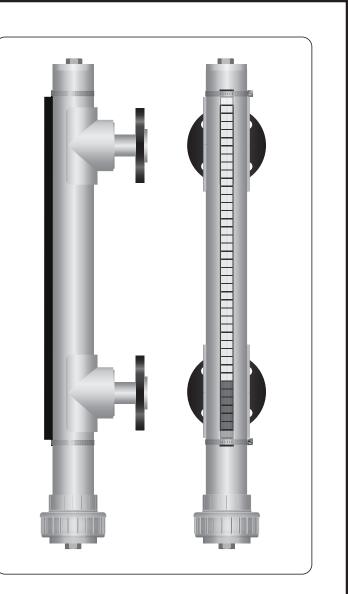

WARNING

Level indicator installation and using must be done outside from any magnetic field zone. Use non magnetic connection (Brass, Stainless Steel or plastic). Any iron device must be installed at 10 cm minimum distance fare. Ensure chemical compliance between liquid and level indicator. To get easy mounting and dismounting, a valve can be placed between tank and level indicator flange. Those valves may be used, also, for liquid regulation to avoid strong float up movement (which may damage it). Inlet tank pressure, then in level indicator, must not be over specified in technical features (6 bar as a maximum).

INTRODUCTION

Those level indicators allow instantaneous liquid level reading, even they are opaque. They are installed on tank side, by flanges. Measurement on communicating vessels principle. The Float, equipped with magnet, moves bi-colours flaps which keep their positions until the float is coming back. Their colours (red and yellow on black back side) ensure instantaneous and easy reading. Equipped with graduated rule (in option) reading accuracy will be higher.

INSTRUCTIONS MANUAL



Fax : (+33) 01 34 10 16 05 - E-mail : info@bamo.fr

MAGTOP 801, 803, 806 560-06/1 560 M0 06 C

MES

19-03-2014

LEVEL INDICATORS

1. MOUNTING

Verify tank flanges compatibility with MAGTOP flanges.

Install level indicator on tank side. Do not forget to set seals (not furnished). It is highly suggested to set insulation valves, between tank and level indicator, in order to be able to remove the float in case of jamming. Insert the float by removing union 7. **H is indicating float top.** During installation, bi-colours flaps may not be goodly set.

They will get right position on float movement.

They must be red when float is going up, and yellow when float is going down. In case of bad level reading, flaps rule can be turned around the tube by unlocking fixing collars.

After re-positioning, lock smoothly collars to avoid damaging this rule.

MAGTOP can be equipped with different options which are:

- Graduated ruler, done with agreement, with requested measure unit (cm, % or volume)

- Continuous level output rule with potentiometric or 4-20mA analogic output (RTM)

- Level switches: BRK-60 MAG ; BRT-60 MAG

(To set a level switches or other options, see specific starting up notice.)

2. STARTING UP

It is suggested to install level indicator on atmospheric pressure, to avoid to quick up float movement, which may damage it.

On magnet passage, flaps turn of 180° passing from yellow to red.

Exact level is indicting by flaps which turned only of 90°.

Indicator drain has to be done by unscrewing nut 9.

3. MAINTENANCE

For wast liquids with particles, float might be stopped. Drain level indicator and tank to eliminate dusts. If the float is steal keep stopped, dismount the MAGTOP for full cleaning.

4. TECHNICAL FEATURES

MAGTOP 801 Process connection:

Density:

Material: Max. temperature of fluid: Pressure /MAGTOP: PVC flange, ND 25 or ND 32 *(PN 10)* PVC 50°C 6 bar at 20°C as a maximum 1

PPH flange,

PPH

90°C

110°C

1

1

MAGTOP 803 Process connection:

Material: Max. temperature of fluid: Pressure /MAGTOP: Density:

MAGTOP 806

 
Process connection:

Material: Max. temperature of fluid: Pressure /MAGTOP: Density: PPH steel reinforced flanges, ND 25 or DN 32 *(PN 10)* PVDF


6 bar at 20°C as a maximum

6 bar at 20°C as a maximum

ND 25 or DN 32 (PN 10)



Magnet ruller

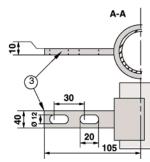

Vent hole 1/2" 110 1) 2 3 (11)Only when L > 2000 mm M 5 6 240 (9

It. Description

- 1 PVC, PPh or PVDF guiding tube Ø 63
- 2 MAKROLON magnet ruler
- **3** PVC, PPh or PVDF float
- 4 Supplementary support
- 5 PVC or PPH steel reinforced flanges, ND 25 or ND 32
- 6 PVC, PPh or PVDF sealing surface
- 7 Magnet ruler fixing collar, stainless steel 304
- 8 Union (3 pieces) for maintenance
- 9 Drain tap
- **10** Draining valve (option)
- 11 Level switches (option)

560 M1 06 C

BAMO mesures