

# BAMOPHOX 194

## Amperometric sensors signal monitor



## INSTRUCTIONS MANUAL

**BAMO MESURES**

22, Rue de la Voie des Bans - Z.I. de la Gare - 95100 ARGENTEUIL  
Tél : (+33) 01 30 25 83 20 - Web : [www.bamo.fr](http://www.bamo.fr)  
Fax : (+33) 01 34 10 16 05 - E-mail : [info@bamo.fr](mailto:info@bamo.fr)

Amperometric signal monitor  
**BAMOPHOX 194**

13-12-2013

194 M1 01 F

**MES**

**194-01/1**

# Amperometric signal monitor **BAMOPHOX 194**

(Technical information and Manual for LOGGER /RS422 version are on a specific document)

## Table of contents

	<i>Page</i>
1. TECHNICAL SPECIFICATIONS	3
2. DIMENSIONS	3
3. WIRING	4
4. FRONT PANEL	7
SCROLLING MENU	8
ABOUT BAMOPHOX	9
CONSULTING / MODIFYING	9
TESTING RELAY OUTPUTS	9
SENSOR CONFIGURATION	10
ADJUSTING THRESHOLD 1	11
ADJUSTING THRESHOLD 2	11
ADJUSTING THRESHOLD 3	12
ON/OFF REGULATION	13
PID REGULATION	15
ANALOG OUTPUT 4-20 mA FOR MEASUREMENT SIGNAL	17
ANALOG OUTPUT 4-20 mA FOR TEMPERATURE	17
TEMPERATURE CONFIGURATION	17
SENSOR CALIBRATION	18
TESTING REGULATION MODE	19
CONFIGURING ALARM CONTACT	19
LANGUAGE	19

# 1. TECHNICAL FEATURES


Displayed parameters:	Measured values - Configuration Menu - Temperature
Display:	Back lighted - 2 lines of 16 alphanumerical characters ; 9 mm high
Indication:	LED alarms status
Configuration:	8 push buttons keyboard on front board - Keyword protected
Sensor input:	For amperometric sensors 4-20 mA (2 wire technique) or 0/-2 V (4 wire technique)
Scales:	Configuration within the sensor in use, from 0.001 to 9999 ppm or g/L
Accuracy:	depending of the sensor in use (see technical features of sensor)
Flow control	Input for inductive sensor type NPN (making contact if present flow rate)
Temperature:	±3.0 °C
Relay outputs:	4 contacts (Silver alloy), voltage free
Thresholds:	3 programmable independent thresholds - with adjustable hysteresis 0...100 % * threshold S3 available in copy of external input signal (example: flow sensor) and adjustable, timer from 0 to 9999 sec
Output relay (S4)	Common alarm signal for: Too long injection, Temperature out of range etc.
Contact:	Initial resistance 0.1 Ohm as a maximum (voltage drop 6 V DC 1 A) Rated at 831 V AC / 3 A / 277 V AC ; 90 W / 3 A / 30 V DC Switching capacity (minimum) 100 mA, 5 V DC (depending of switching frequency, ambient conditions, accuracy) Mechanical life time (minimum) 5 x10 <sup>5</sup> operations (180 commutation /min) Electrical life time (minimum) 2 x10 <sup>5</sup> (20 comm./min) [3 A, 125 V AC], [3 A, 30 V DC] and 10 <sup>5</sup> (evaluated charge) for 3 A, 125 V AC
ON/OFF Regulation:	Pulse time 0...9999 sec - High and low proportional bandwidth, high and low dead zone.
Calibration sequence:	Regulation on standby, relay outputs inhibited, analogical outputs stand on last values
Measurement output:	0/4-20 mA (maxi 600 Ohm) proportional to measurement, galvanic insulated
Temperature output:	0/4-20 mA (max 600 Ohm), scaling -20 to +160°C, galvanic insulated
Program Testing:	simulation through the menu on measurement, temperature, and relay outputs
Main power supply:	230 V AC / 50-60 Hz (other on request) - Consumption 10 VA
Models:	Panel mounting, IP65, 72 x 144 mm, connections on screw terminal IP40 Idem DIN Rail mounting, only for blind monitor Wall mounting, IP65, cable glands, connections on screw terminal

## OPTION (RS 422 + Logger)

Communication:	RS422 output, J-BUS link, binary slave mode, 2400 to 9600 bauds
Data Logger:	Cycle average measurement record, with a programmable period, 150 000 records on memory card / External driver necessary for reading

# 2. DIMENSIONS

**Extension terminal:**  
identical to the panel  
or wall mounting

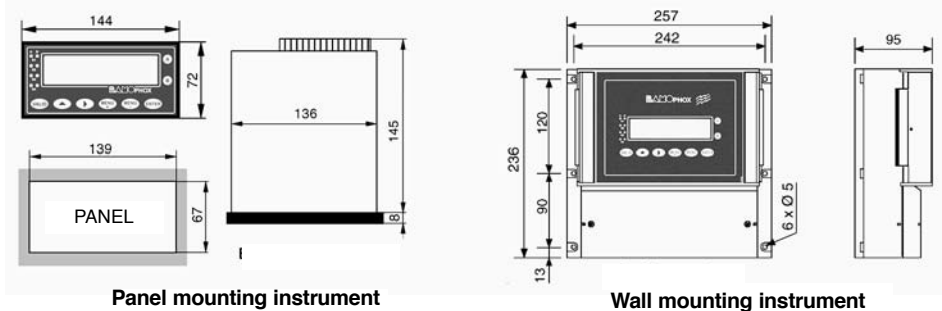


Panel mounting instrument


Wall mounting instrument


### 3. WIRING

#### PANEL MOUNTING INSTRUMENT

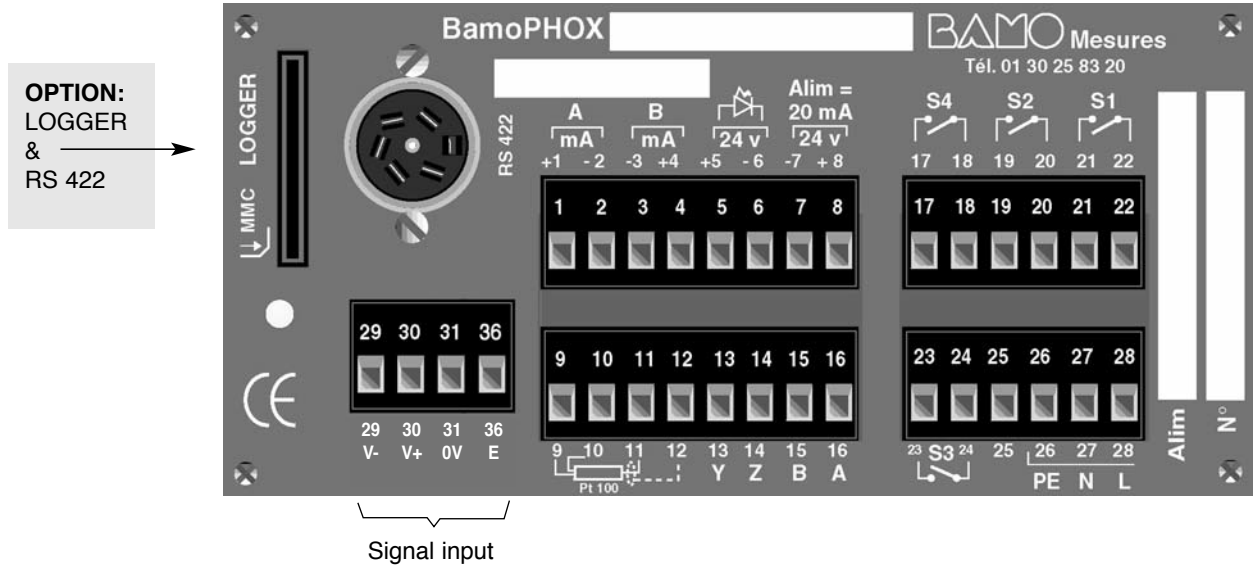

#### WALL MOUNTING INSTRUMENT

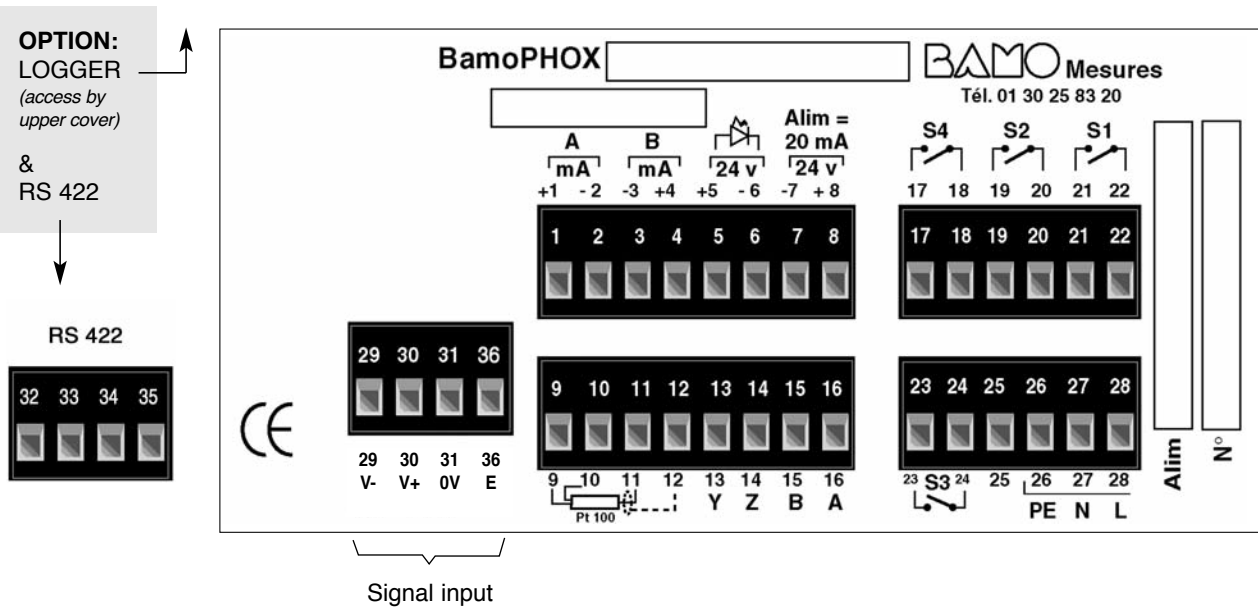


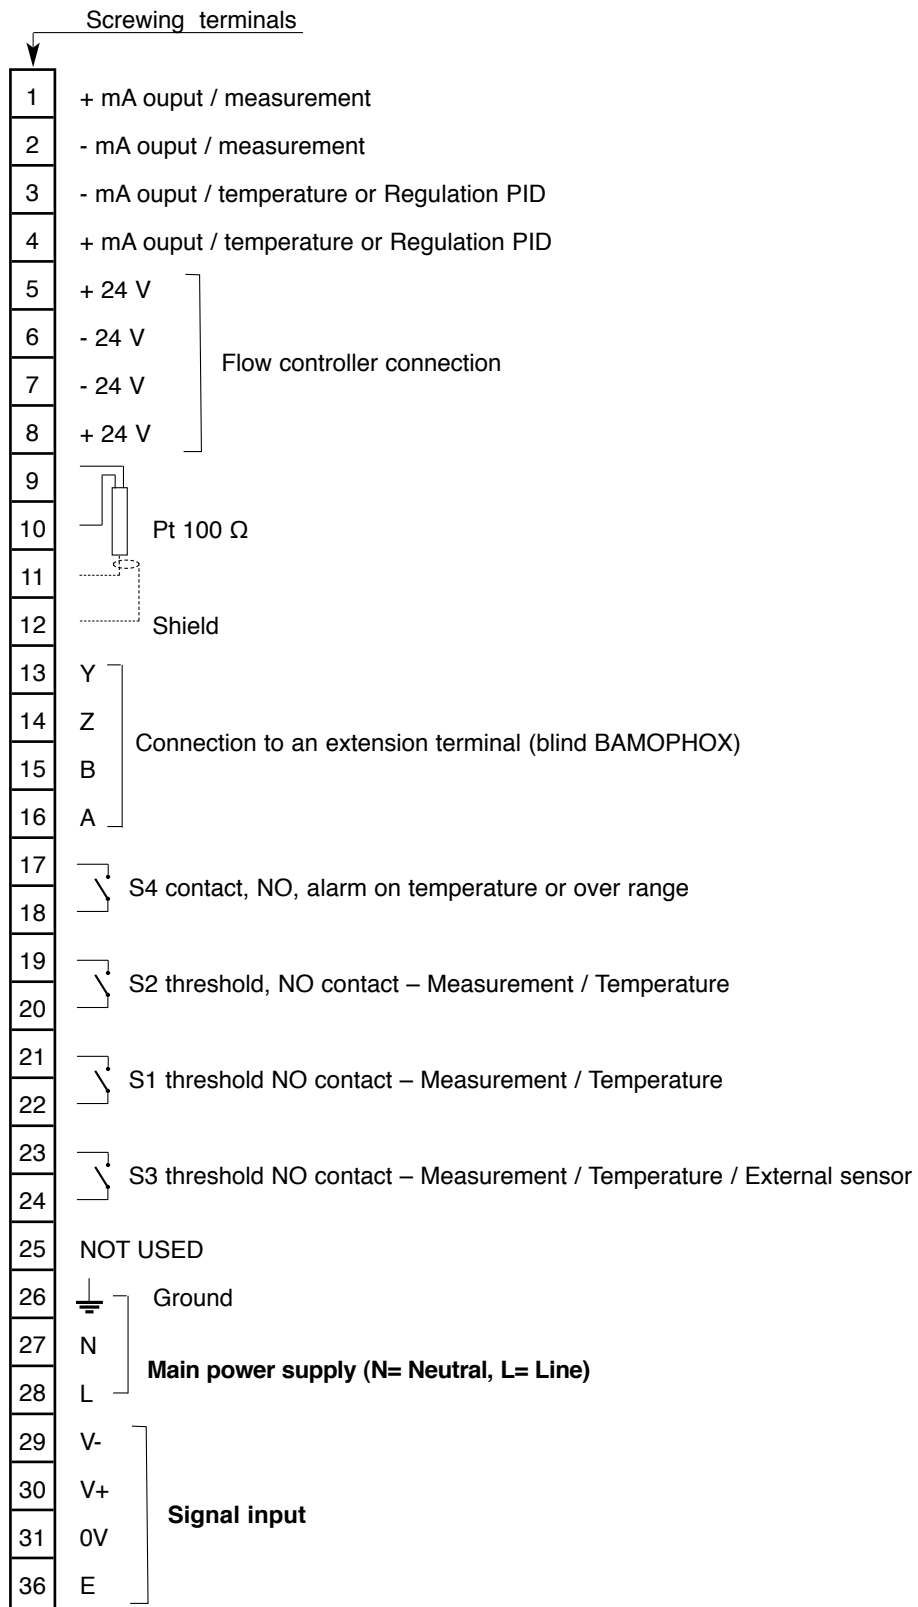


### Wiring from wall or panel mounting BAMOPHOX to an Extension terminal BAMOPHOX

- Maximum length cable:  
500 m



- Wire specifications:  
Mains cable or 4 wires shielded cable  
 $\geq 0,25 \text{ mm}^2$  cross section

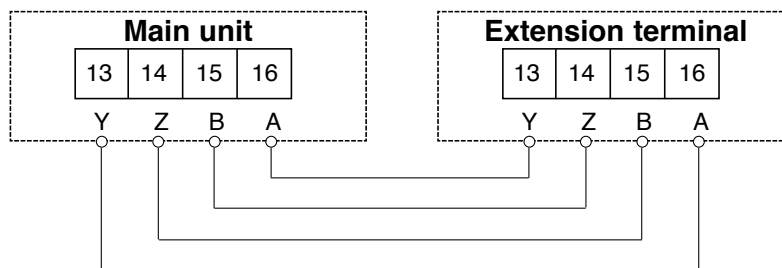

**TERMINAL FOR SENSOR CONNECTION**

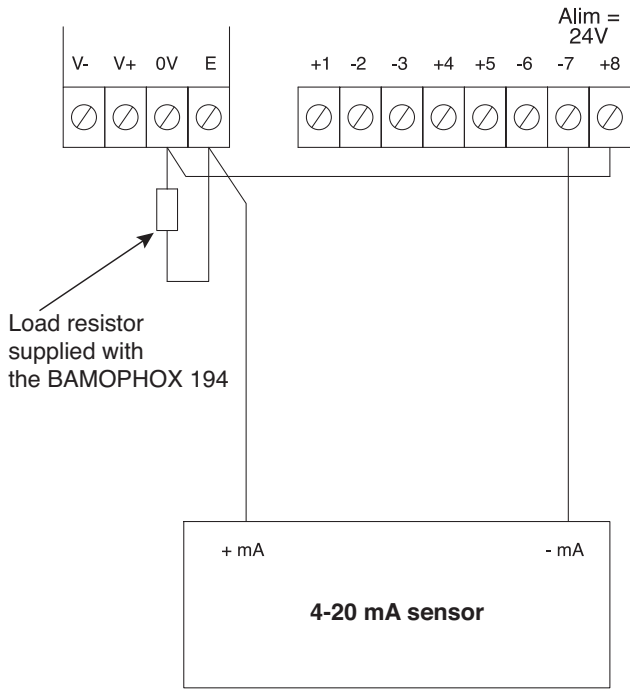

**TERMINAL FOR SENSOR CONNECTION**

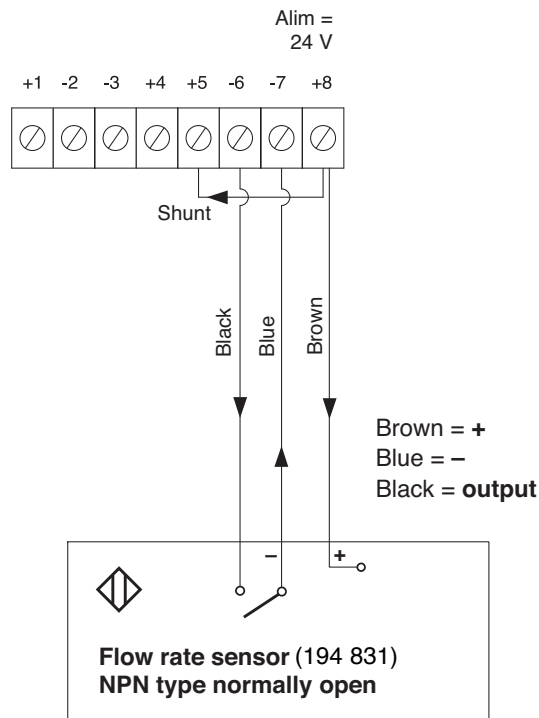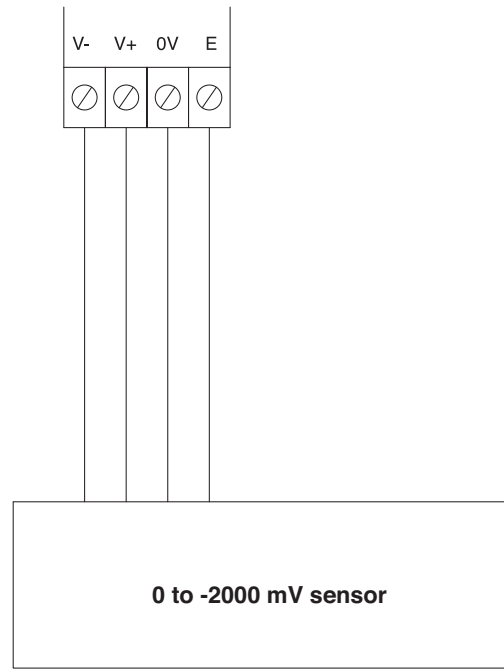

## 4. FRONT PANEL

### S1, S2, S3, and S4

indicate relays status:

LED lighting = contact ON  
 LED OFF = contact OFF  
 LED flashing = Timer in use

2 lines /16 alphanumeric characters  
 9.22 mm high - Back lighted

### Key "A"

To display the parameters of upper line.  
 (main BAMOPHOX)

### Key "B"

To display the parameters of lower line.  
 (Extension blind BAMOPHOX)



### "VALID" key

To save the parameters on EPROM  
 when it asks:

### SAVING ?

Caution, when you press this key,  
 all parameters are saved.  
 (previous data programming  
 will be overwritten).

If you are not sure of any modification,  
 do not press the VALID key,

To change parameters of data capture:

Numeric input increase the  
 flashing digit (loop 0 after 9).

Reverse the choice Yes / No,  
 Up/Down, 0-20 mA / 4-20 mA etc.

To go to the next display or to change a value.

### "ENTER" key

To change the step displayed menu.  
 At the last step, it comes back to the  
 first line.

### "MENU -" key

To move the cursor during configuration.  
 At the last digit, comes back on the first one.


### "MENU +" key

To go to the next menu.

Pushing simultaneously both keys

"MENU +" and "ENTER"  
 allows a fast return to measurement display.

## I/ PRESENTATION ET DEFILEMENT DU MENU

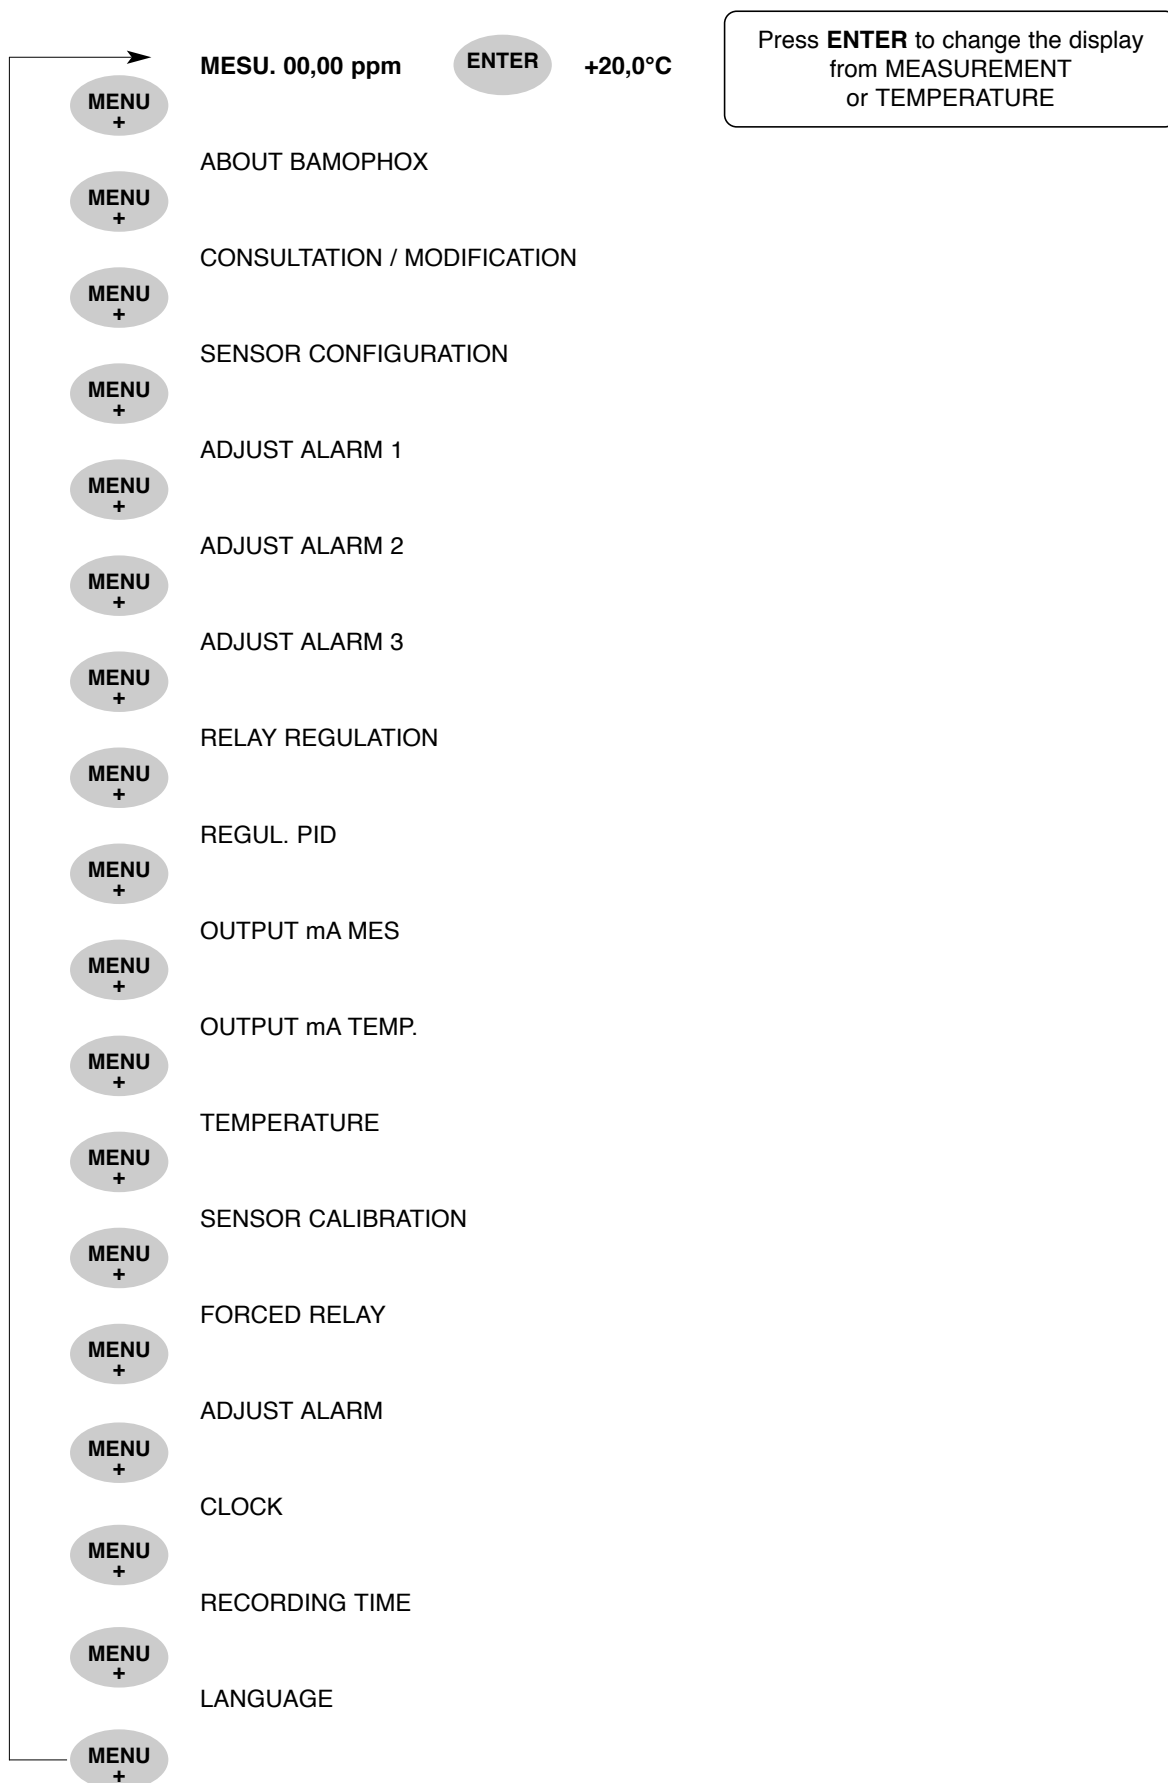



## ABOUT Bamophox

ENTER

ABOUT BAMOPHOX

ENTER

VERSION 2.04

ENTER

SERIAL N°

ENTER

2045105

## CONSULTATION / MODIFICATION

CONSULTATION



MODIFICATION

ENTER

CODE ? 0000



ENTER

CODE ? 5105

ENTER

TIME : 30 mn

MENU  
+

The last 4 digits (of serial number) are the key code to access to the MODIFICATION menu.  
When wrong code is entered, a message "ERROR" appears during 3 seconds

After 30 minutes, the display returns automatically to the measurement mode

**From this mode: MODIFICATION, for testing the relay outputs and regulation mode: reach measurement display (last screen) and press ENTER**

ENTER

FORCED MEASURE

ENTER

00.00 ppm



(one digit is flashing) Modify the value. Immediately the instrument acts within the configuration (thresholds, regulation, analog outputs ...).

**When PID regulation is activated, the display shows the PID %**

ENTER

FORCED PID

ENTER

00.00 ppm 00.00 %



(One digit is flashing) Modify the value. Immediately the instrument acts within the configuration.

To test the analog output (mA) on PID mode: the PID should be active and in MANUAL mode.

ENTER

Press ENTER to cancel the test mode and to go back to the measurement mode.

## SENSOR CONFIGURATION

Next menu: — **MENU** + —> ADJUST ALARM 1

ENTER

PRODUCT



Select corresponding sensor for: free chlorine, total chlorine, chlorine dioxide, ozone, hydrogen peroxide, peracetic acid

ENTER

UNIT



Choose between: ppm / g/L

ENTER

x-x.xxx ppm

Decimal point (coma) position

ENTER

SCALE

ENTER

MAXI: 00.00



Maximal value of the measuring scale

ENTER

SENSOR



mA or mV

ENTER

SAVING ?

ENTER

## INTRODUCTION TO BAMOPHOX CONTROL

Before setting up alarms or way of control, the running way has to be defined.

**Bamophox 194 allows you three ways:**

- Single alarms with alarms S1 and/or S2
- Relay regulation with set point, proportional bands and dead zones
- P.I.D. regulation with the 4-20 mA signal

There is a specificity of alarm 3 in Bamophox 194. It can be setup for an external sensor. Signal is coming from an inductive flow rate sensor type NPN. This sensor is mounted in the flow cell.

**Sensor signal entering Bamophox 194 activates or deactivates S3 alarm:**

- In case of flow rate, alarm 3 is closed (active)
- In miss of flow rate, alarm 3 is open (inactive)

**This signal will act on the regulation like following:**

- If the user is running with single alarms, there will be no more action on alarms S1 and/or S2. However user can wire alarms S1 and S3 in serial way in the aim of securing the injection (if alarm 1 deals with the reagent injection)
- If the user is running in relay regulation, alarms S1 and S2 become open (inactive). The regulation is inhibited.
- If the user is running P.I.D regulation, 4-20mA signal become locked.

## ADJUST ALARM 1

Next menu: — **MENU** + —> ADJUST ALARM 2

ENTER

ALARM 1 ON/OFF



ENTER

ALARM 1 MEASURE/TEMP



ENTER

ALARM 1 LOW/HIGH



ENTER

ON 00.00 ppm



To close the contact S1 at this value

ENTER

OFF 00.00 ppm



To open the contact S1 at this value

ENTER

DELAY UP ON/OFF



Delay (or no delay) before to close the contact S1

ENTER

TIME 0000 SEC



Delay time to close the contact S1

ENTER

DELAY DOWN ON/OFF



Delay (or no delay) before to open the contact S1

ENTER

TIME 0000 SEC



Delay time to open the contact S1

ENTER

SAVING ?

VALID

## ADJUST ALARM 2

Next menu: — **MENU** + —> ADJUST ALARM 3

ENTER

ALARM 2 ON/OFF



ENTER

ALARM 2 MEASURE/TEMP



ENTER

ALARM 2 LOW/HIGH



ENTER

ON 00.00 ppm



To close the contact S2 at this value

ENTER

OFF 00.00 ppm



To open the contact S2 at this value

ENTER

DELAY UP ON/OFF



Delay (or no delay) before to close the contact S2

ENTER

TIME 0000 SEC



Delay time to close the contact S2

ENTER

DELAYDOWN ON/OFF



Delay (or no delay) before to open the contact S2

ENTER

TIME 0000 SEC



Delay time to open the contact S2

ENTER

SAVING ?

VALID

# ADJUST ALARM 3

Next menu: **MENU +** → RELAY REGULATION

**ENTER**  
ALARM 3 ON/OFF ▲

**ENTER**  
EXTERN NO/YES ▲

**NO**= set up (ALARM 3 MEASURE/TEMP)

**YES**= flow rate sensor wired

SAVING ?

**VALID**

**ENTER**

**ENTER**  
ALARM 3 MEASURE/TEMP ▲

**MEASURE**= Threshold against measured value  
**TEMP**= Threshold against temperature measured value

**ENTER**  
ALARM 3 LOW/HIGH ▲

**HIGH**= Contact closes when value goes over the limit  
**LOW**= Contact closes when the value goes under the limit

**ENTER**  
ON 00.00 ppm ▲ ▶

To close the contact S3 at this value

**ENTER**  
OFF 00.00 ppm ▲ ▶

To open the contact S3 at this value

**ENTER**  
DELAY UP ON/OFF ▲

Delay (or no delay) before to close the contact S3

**ENTER**  
TIME 0000 SEC ▲ ▶

Delay time to close the contact S3

**VALID**  
DELAYDOWN ON/OFF ▲





Delay (or no delay) before to open the contact S3

**ENTER**  
TIME 0000 SEC ▲ ▶

Delay time to open the contact S3


**ENTER**  
SAVING ?

**VALID**

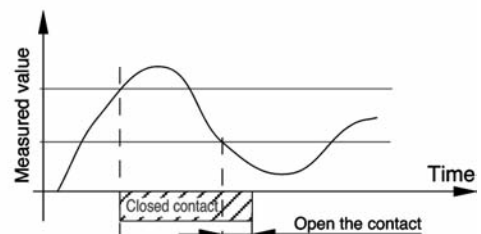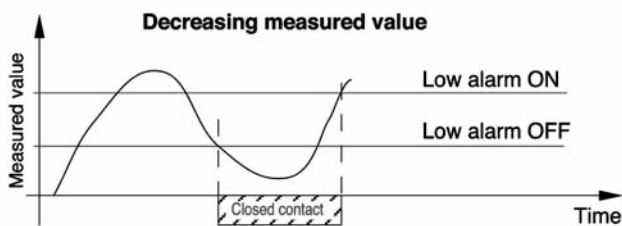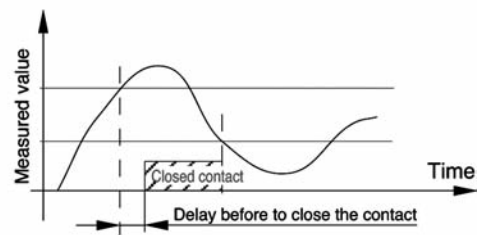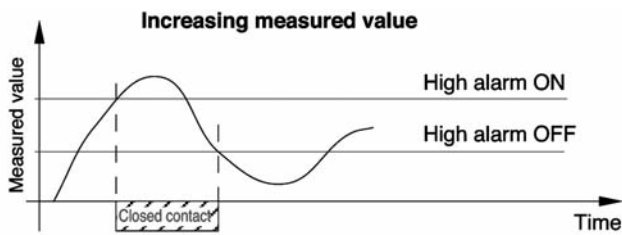

# RELAY REGULATION


Next menu: **MENU +** → *REGUL PID*

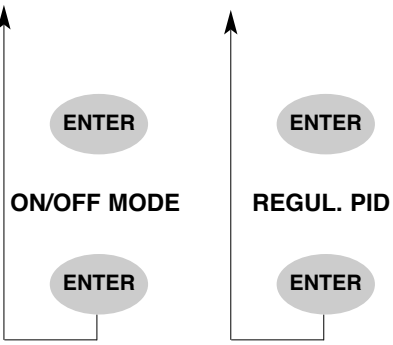


Indicates when S1 or S2 are "ON"  
Back to "ADJUST ALARM" to switch  
OFF S1 or S2

Indicates when "REGUL. PID" is  
operating  
Back to "REGUL. PID" menu  
to switch it OFF

- REGUL ON/OFF ▲
- ENTER
- SET VAL. 0,000 ppm ▲ ▶ Set point
- ENTER
- T. CYCLE 0000 SEC ▲ ▶ Cycle time
- ENTER
- HIGH PB 00.00 ppm ▲ ▶ Highest limit for proportional bandwidth
- ENTER
- LOW PB 00.00 ppm ▲ ▶ Lowest value for proportional bandwidth
- ENTER
- HIGH DZ 00.00 ppm ▲ ▶ Highest value for dead zone
- ENTER
- LOW DZ 00.00 ppm ▲ ▶ Lowest value for dead zone
- ENTER
- SAVING ?
- VALID

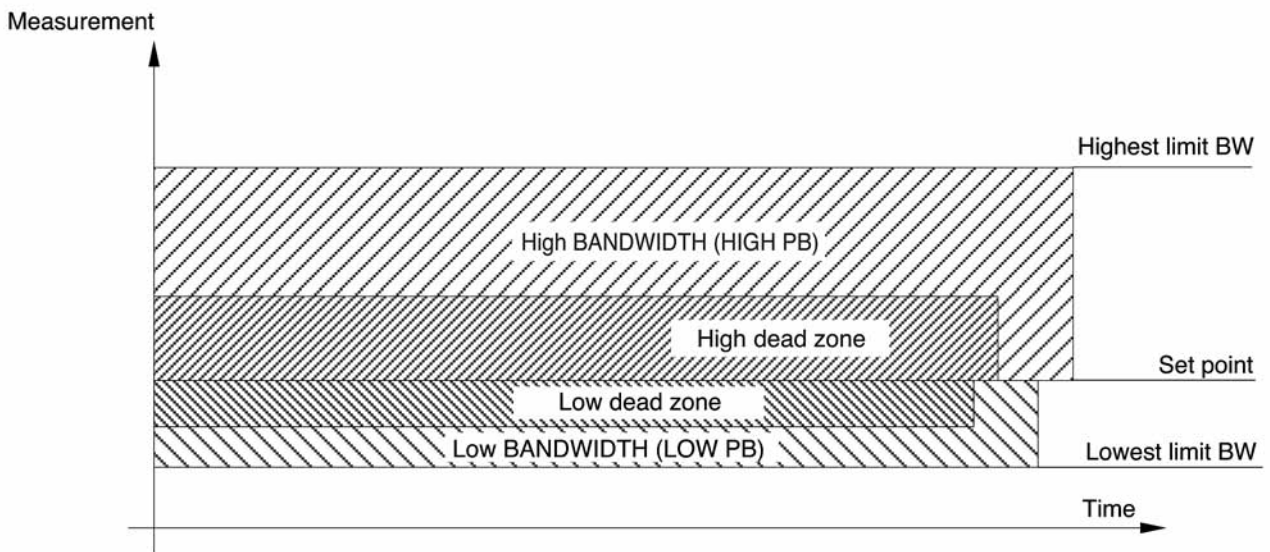

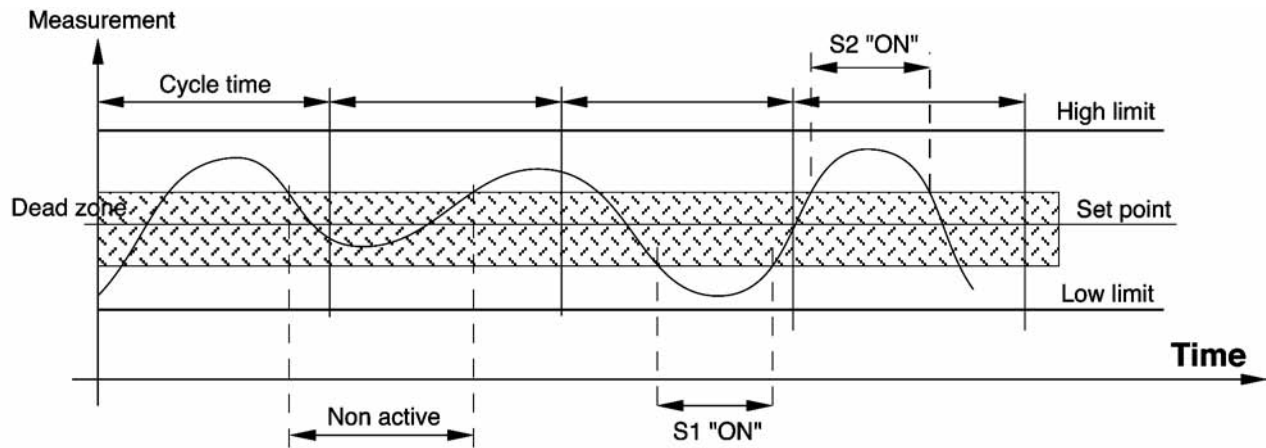

### Example

With process configuration:

- Set point: 1.5 ppm
- High dead zone: 0.4 ppm between 1.5 and 1.9 ppm
- Low dead zone : 0.1 ppm between 1.4 and 1.5 ppm
- High BANDWIDTH: 3.5 ppm (that is a limit of 5 ppm for the maximum)
- Low BANDWIDTH: 0.5 ppm (that is a limit of 1 ppm for the minimum)

- Over the highest limit (>5 ppm), S2 is "ON" for a continuous injection (contact S2 is closed)
- Under the lowest limit (<1 ppm), S1 is "ON" for a continuous injection (contact S1 is closed)
- Inside the dead zone (between 1.4 & 1.9 ppm), S1 and S2 are "OFF", no injection at all (contacts S1 and S2 are opened)
- If the measurement value is between the dead zone and the highest limit (between 1.9 & 5 ppm) or between the dead zone and the lowest limit (between 1.0 & 1.4 ppm), the contact S1 or S2 are "ON" only for a time proportional to the step between measurement and desired value.


$$\text{Closing contact time /S1} = \frac{\text{Cycle time} \times (\text{measure} - \text{set point})}{\text{Low proportional BANDWIDTH}}$$

**CAUTION:** The minimum closing time of a relay is 1 second.





















If the measurement M=1.42 and if the cycle time is 10 seconds,

the closing contact time is:  $\frac{10 \times (1.5 - 1.42)}{0,4} = 2 \text{ sec}$

## REGUL PID

Next menu:  → Output mA MEASUREMENT

This operating mode allows a PID regulation with an analogic output 0/20 or 4/20 mA (terminals 3 and 4). This output is no more available for temperature output.

	REGUL <b>ON/OFF</b>		To switch ON or OFF the regulation mode
	REGUL <b>AUTO/MANU</b>		MANU=MANUAL to be able to check the relays output
	SET VAL <b>00.00 ppm</b>	 	Set point value
	GAIN : <b>00.000</b>	 	Gain setup (see below ADJUST PID PARAMETERS)
	T.i : <b>0050 Sec</b>	 	Integral timing
	Td : <b>0012 Sec</b>	 	Derivative timing
	ACTION: <b>DIRECT/REVERSE</b>		Direct action or Reverse action for PID regulation
	OUTPUT <b>4/20 mA / 0/20 mA</b>		Signal output
	SAVING ?		

To switch the PID regulation on stand-by, input 24 V= 20 mA on terminals 5(+) and 6(-).

### ADJUST PID PARAMETERS

In order to determinate the setup values for PID regulation, we recommend to use the Ziegler-Nichols open loop method


#### Proceed as following:

- Connect a recorder to the analogic measurement output or write the reading measurement values for then to draw the graph  $f_{(time)}$
- Switch on the PID regulation in MANUAL mode
- Reach to and keep close the measurement value to the set point, adjusting the PID output
- Apply on  $\Delta Cde$  a step of 10 % (for instance) on the analog output (Cde).

**Example:** if the value is 30%, apply 40%

- Note on the graph the corresponding timing  $T_0$
- Find on the graph both times  $t$  and  $T$  such as  $\Delta m = \Delta Cde$ :  
 $t$  = delay of response  
 $T$  = Time corresponding to the same variation in % of measurement ( $\Delta m$ ) and the analog output ( $\Delta Cde$ ),  $\Delta m = \Delta Cde$ .  
 This value may be found out on the slope.
- Modify the PID parameters as following:

Regulation	Gain	Ti(s)	Td(s)
PID	$1.2 \times T/t$	$2 \times t$	$0.55 \times t$
PI	$0.9 \times T/t$	$3.3 \times t$	0
P	$T/t$	9999	0

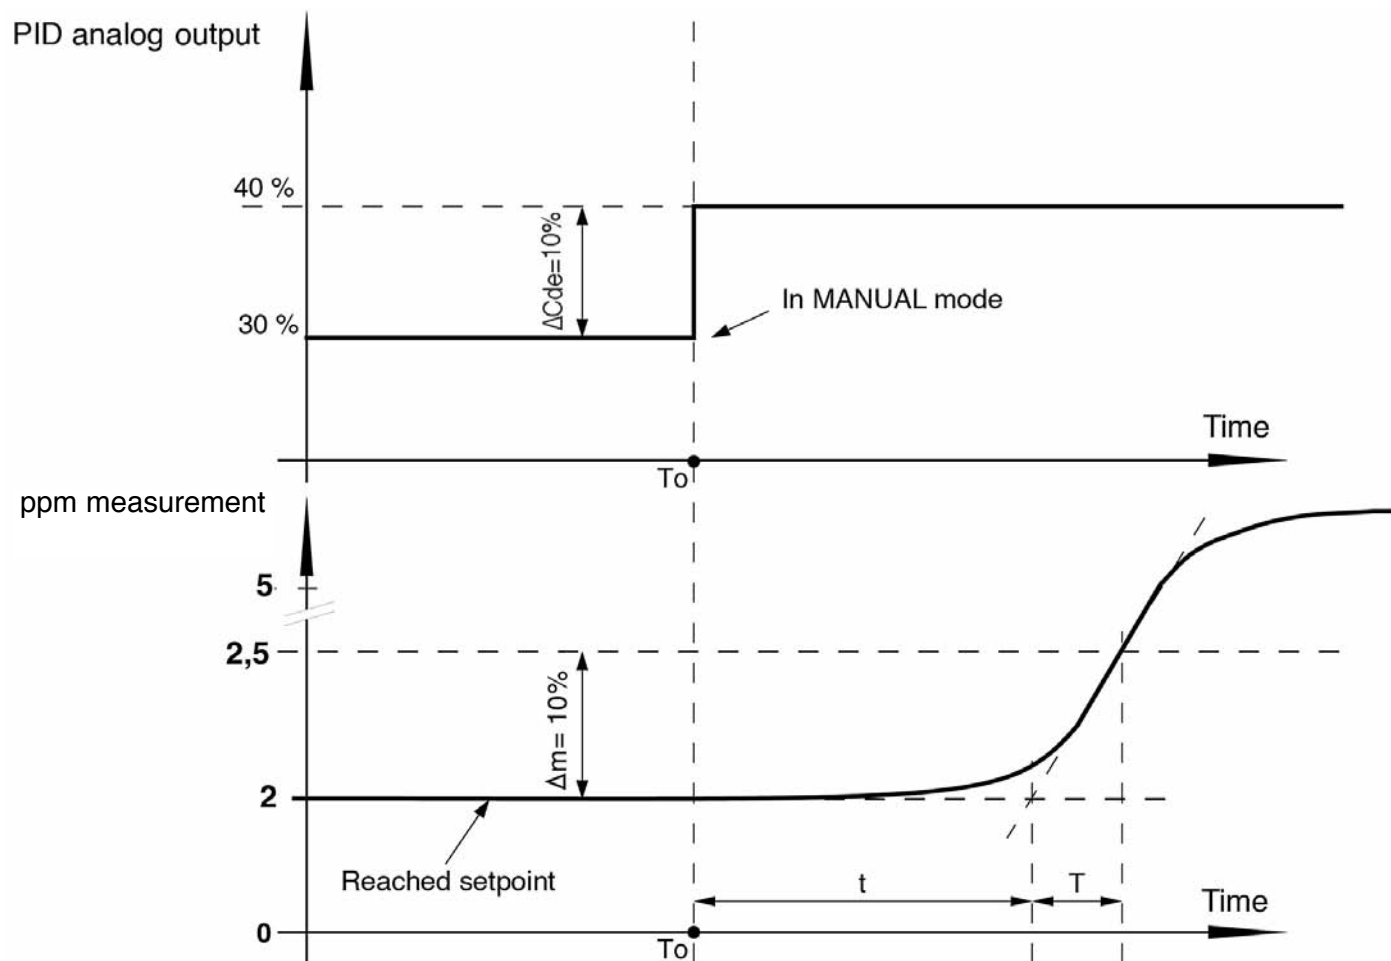



## Output mA MEASUREMENT

Measurement signal copy on the analog output

Next menu:  → Output mA TEMP.

ENTER

HIGHER 00.00 ppm



Value corresponding to 20,00 mA

ENTER

LOWER 00.00 ppm



Value corresponding to 0.00 or 04,00 mA

ENTER

OUTPUT 4/20 mA / 0/20 mA



Output type

ENTER

SAVING ?

VALID

## Output mA TEMP.

Next menu:  → TEMPERATURE

**Caution: When PID regulation is active, this step menu does not appears**

ENTER

HIGHER 0000 °C



Value corresponding to 20.00 mA

ENTER

LOWER 0000 °C



Value corresponding to 00.00 or 04.00 mA

ENTER

OUTPUT 4/20 mA / 0/20 mA



Output type

ENTER

SAVING ?

VALID

**To switch the PID regulation on stand-by, input 24 V= 20 mA on terminals 5(+) and 6(-).**

## TEMPERATURE

Next menu:  → SENSOR CALIBRATION

ENTER

MEASURE : AUTO / MANUAL



**AUTO:** A Pt 100 probe should be connected

**MANUAL:** Without Pt 100 probe  
Manually entered temperature value

ENTER

FLUIDE T. + 0000 °C



(In MANUAL Mode only)

ENTER

SAVING ?

VALID

## ELECTRODE CALIBRATION

Next menu:  → FORCED RELAY

**CAUTION - Temperature compensation:**  
set up the instrument on **MANUAL** mode at 20°C

During calibration in mode "MODIFICATION", measurement value is on stand-by on the last reading value, the regulation is on stand-by. A delay after ending the calibration allows a restart of the complete system before to automatically restart the regulation mode.

ENTER

STANDARD. ZERO YES/NO



Choose **NO**, the sensor is a non adjusting zero required  
**NO** will send to the display "SLOPE"

ENTER

STANDARD. SLOPE YES/NO



Choose **YES** to proceed to a sensor calibration  
**NO** will send to the display "DELAY"

ENTER

The calibration measuring value is locked when the submenu "STANDARD" is displayed. Proceed at the same time to a test to know the standard value according to the sensor in use.

STANDARD 00.00 ppm



Enter the result value

*(For good calibration, value has to be as closed as the sensor full range)*

ENTER

SLOPE xxx,x %

Sensor gain is displayed.

ENTER

### CAUTION:

**If the slope value is >200% or <50%**, do not valid this calibration step. Check the dirtiness of the sensor; do a maintenance on it and proceed to a second calibration.

**If the slope value is between 50 and 200%**, proceed to a second test to confirm the previous test

DELAY 0015 Sec

Set up the time during the measuring and status regulation previous to the calibration, will be displayed after saving the calibration.

SAVING ?

VALID

**CAUTION - Temperature compensation:** if a PT100 probe is connected, reset the temperature compensation in "AUTO"

## FORCED RELAY

Next menu: — **MENU** + —> ADJUST ALARM

ENTER

ALARM 1 ON / OFF



ENTER

ALARM 2 ON / OFF



ENTER

ALARM 3 ON / OFF



ENTER

ALARM 4 ON / OFF



ENTER

} Diagnostic mode to test manually the threshold configurations

## ADJUST ALARM

Next menu: — **MENU** + —> LANGUAGE or **CLOCK**

ENTER

WITH / WHITHOUT ALARM



ENTER

TMAX. S1 0000 Sec



Over timing on S1 closed contact  
(maximum time for active relay)

ENTER

TMAX. S2 0000 Sec



Over timing on S2 closed contact  
(maximum time for active relay)

ENTER

SAVING ?

VALID

**ENABLES or DISABLES the S4 relay**

**(In case of malfunction of the control relay)**

This mode allows detecting a malfunction on S1 and S2 contacts ; an overtime contact could be set up.

## LANGUAGE

ENTER

FRENCH / ENGLISH / ITALIAN  
GERMAN



ENTER

SAVING ?

VALID

**NOTE:**  
To complete the configuration  
of a **BAMOPHOX Logger** (option)  
follow the corresponding manual.